




How to Operate Perco Plus Gun



To open the base cover, pull back Opening Buttons that are located on both sides of the labeler.



Open the cover of the label case as shown.

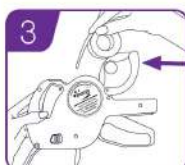


Put a label roll into the label case.




Insert label paper to the inside of the labeler and bring it out of the base until about 10cm of the label paper comes out.



Close the base cover.

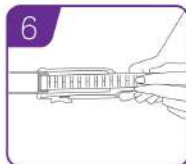

Adjust the label paper so that the holes of the paper are folded over the juts of the feed roller.

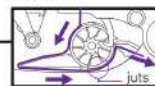

Close the base cover, making sure that the label paper is tightly rolled over the feed roller.

Pull the lever of the labeler three times to feed the labels.



Attach labels onto your desired position of the product by sliding Attach Roller onto the product.


How to Replace Ink Roller



Press and pull the zigzag-shaped cover () to open the Ink Roller Case.



Grip

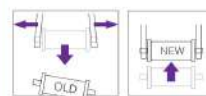

Pull the ink roller by the grip and replace the old ink roller with a new one.

Setting Letters



Pull the dial shaft outward and rotate it to set letters. When finished setting letters, push the shaft inward.



Tip: ★ Black letter in white background shows the layout of each letter.
★ Black letter in black background shows what is printed on the label.
★ Yellow background without letter means blank space.